



airMorn

Garment Steamer

Product User Manual

Model: AM-ADS10P

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:
READ ALL INSTRUCTIONS BEFORE USING. SAVE THESE INSTRUCTIONS. FOR HOUSEHOLD USE ONLY.
USE THIS APPLIANCE ONLY FOR ITS INTENDED USE.

DANGER

To reduce the risk of death by electric shock:

1. Always unplug the appliance immediately after using.
2. Do not place or store the appliance where it can fall or be pulled into a tub or sink.
3. Do not place in or drop into water or other liquids.
4. If the appliance falls into water, unplug it immediately. Do not reach into the water.

WARNING

To reduce the risk of burns, electrocution, fire, or injury:

1. **Do not modify or disassemble.** Unauthorized modification, disassembly, or repair is strictly prohibited. This may cause fire or electric shock. For service, contact airmorn customer support.
2. **Keep away from children.** Do not allow children to use this device unsupervised. Do not operate within reach of infants. Risk of burns, electric shock, or injury.
3. **Flammable materials.** Do not use near gasoline, solvents, or other flammable substances. Risk of explosion or fire.
4. **Damaged cord or plug.** Do not use if the power cord or plug is damaged, or if the plug fits loosely in the outlet. Risk of electric shock, short circuit, or fire.
5. **Do not leave unattended.** Never leave the appliance unattended while plugged in.

Power cord safety:

1. Do not damage, modify, forcibly bend, pull, twist, or bundle the power cord.
2. Do not place heavy objects on the cord or allow it to become pinched.
3. Do not wrap the cord around the appliance body.
4. A damaged cord may cause fire or electric shock.

Hot surfaces:

1. During and immediately after use, do not touch the ironing panel, steam outlets, or steam. Risk of severe burns.
2. Do not use on an ironing board in the horizontal position. Risk of burns.

Stop use immediately if:

1. The plug is loose in the outlet.
2. The cord or outlet generates abnormal heat, smoke, or sparks.
3. The cord shows deep cuts or damage.
4. There are char marks on the cord or plug.

Water and moisture:

1. Do not allow the appliance to get wet. Do not use in bathrooms. Do not operate with wet hands.
2. If the appliance falls into water: (1) Unplug immediately. (2) Do not touch the water.

IMPORTANT SAFETY INSTRUCTIONS

WARNING

Electrical requirements:

1. Use a dedicated outlet rated 15A or higher. Do not share with other high-wattage appliances.
2. If an extension cord is absolutely necessary, use one rated for at least 15 amperes.
3. The power plug must be fully inserted into the outlet.
4. Always keep the power plug clean and free of dust.

After each use:

1. Always turn off the appliance and unplug from the outlet.
2. When not in use, always unplug the power cord.

Polarized plug:

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

CAUTION

1. **Long-pile fabrics.** When steaming shaggy or long-pile textiles, keep distance between the fabric and the ironing panel.
2. **Storage.** Do not store in high-humidity areas such as bathrooms.
3. **Surface inspection.** Before using the vacuum function, check the garment for small hard objects. Foreign debris may damage the appliance.
4. **Dust collection case.** Always keep the case properly installed during use.
5. **Ventilation.** Do not block the ironing panel for extended periods. Clean the dust collection case regularly.
6. **Cooling period.** After use, wait at least 60 minutes before storing or cleaning.
7. **Unplugging.** Always grasp the plug head — never pull by the cord.
8. **Filling or draining.** Always unplug before filling or draining the water tank.
9. **Overheat protection.** Although equipped with overheat protection, always turn off the power after each use.

IMPORTANT SAFETY INSTRUCTIONS

CAUTION

1. **Moving the appliance.** Ensure it has cooled completely before moving. Risk of injury or burns.
2. **Water leakage.** If the appliance body leaks water, stop use immediately and contact customer support.
3. **Accessory replacement.** Replace accessories or clean the dust collection case only after the appliance has cooled completely.
4. **Stability.** Do not use on unstable surfaces such as thick carpets or soft mats. The appliance may tip over, causing injury or burns.
5. **Do not tilt or shake the appliance body violently.** Risk of burns or malfunction.
6. **Do not cover the ironing panel with cloth.** Localized overheating may cause fire.
7. **Metal objects.** Keep pins, wires, and other metal objects away from the power plug.
8. **Steam safety.** Never spray steam at yourself or others while wearing clothes. Never point steam outlets toward any person. Risk of severe burns.

Water tank:


Use only tap water or purified water. To help minimize mineral buildup and extend the service life of the appliance, purified water is recommended. **Do NOT use:**

1. Hot water
2. Mineral water
3. Demineralized water
4. Alkaline or electrolyzed water
5. Scented water, fabric softeners, or additives

Fabric precautions:

1. Check the garment care label before use. Do not steam items marked "Do Not Iron."
2. Do not use on leather or faux leather.
3. Do not use near heat- or moisture-sensitive walls or furniture.
4. For delicate, high-end, or specially treated fabrics: always test on a hidden area first.

GETTING TO KNOW YOUR STEAMER

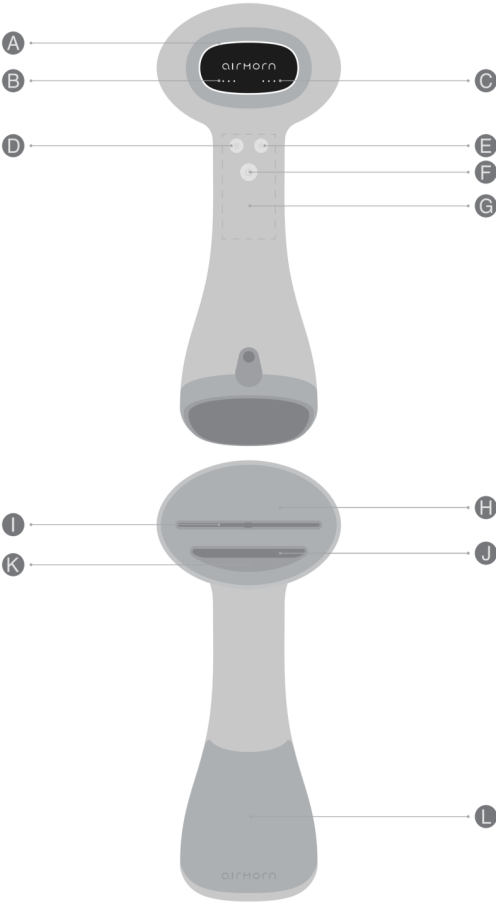


- | | | | | | |
|----------|-------------------------|----------|---------------------------|----------|----------------------|
| A | Breathing Light | E | Suction Adjustment Button | I | Steam Outlets |
| B | Steam Indicator | F | Main Power Button | J | Suction Panel |
| C | Suction Power Indicator | G | Smart Sensing Area | K | Dust Collection Case |
| D | Steam Adjustment Button | H | Ironing Panel | L | Water Tank |

BUTTONS & INDICATOR LIGHTS



Indicator	Display	Status	Description
01 Breathing Light	Steady on	Ready	Warm-up complete. Press steam or suction button to begin.
	Off	Off	Power is off, or auto shut-off activated after 5 min of inactivity.
	On 1 sec → off	Plugged in	Confirms power connection.
	Slow pulse	Warming up	Heating in progress (~10–15 sec).
02 03 Steam / Suction Indicators	Mode display	Active	3 levels: Soft / Normal / Turbo — adjustable per garment.
	Slow blink	Paused	Appliance paused. Grip handle or press power button to resume.

SMART SENSING & ACCESSORIES

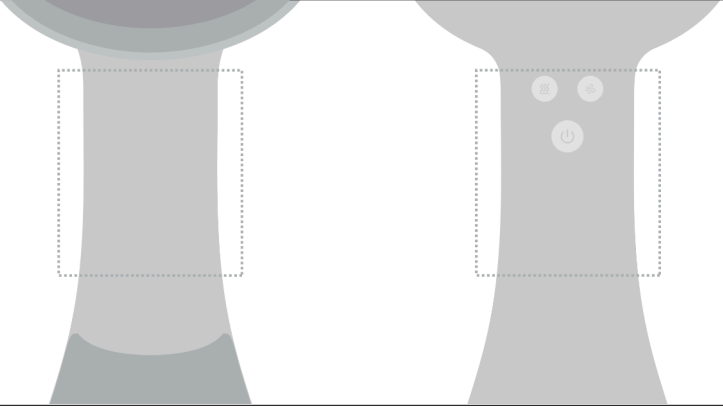

Smart Sensing Area

Smart Sensing pauses steam and suction 1 second after you release the handle. Grip again to resume instantly without reheating.

⚠ Caution: Keep the Steam Outlets pointed away from your body when resuming. Steam may discharge and cause burns.



Dust Collection Case

Remove the suction panel cover, then use the included cleaning brush to remove collected lint — or replace with a new filter.

⚠ Caution: Do not bend forcibly. Keep away from children and pets. Ensure completely dry before reinstalling.

Suction Panel

Press either end to release. After use, align with slots and snap the magnetic assembly back (you'll hear a click).

⚠ Caution: Allow the appliance to cool completely before handling.

PRECAUTIONS FOR USE

Before Use

1. Water only. Fill the tank with tap water or purified water. To help minimize mineral buildup and extend the service life of the appliance, purified water is recommended.
2. Never use hot water, mineral water, scented products, or any additives.
3. Handle the tank gently. Avoid removing and reinserting the tank frequently — this may cause leaks.

During Use

1. Test first. Always test on a hidden area before steaming delicate or high-end garments.
2. Not for leather. Do not use on leather or faux leather.
3. Stubborn wrinkles. Deep creases in heavy cotton may not be fully removable.
4. Detergent residue. Ensure garments are thoroughly rinsed and dried before steaming — residual detergent may cause discoloration.
5. Never steam on a person. Do not aim steam at yourself, others, or worn clothing.
6. Auto shut-off. The appliance powers off automatically after 5 minutes of inactivity.
7. Refilling. If steam weakens, turn off the power, unplug, then refill. Use caution — the body remains hot.
8. Condensation. A small amount of steam or water droplets when resting on a surface is normal.
9. Sounds during use. Pump noise and slight vibration while steaming is normal.
10. Pause function. Press the power button once to pause, once more to resume.

After Use

1. Drain the tank. Empty all remaining water. Standing water may cause malfunction.
2. Cool before storing. Wait until the appliance has fully cooled before moving or storing.

HOW TO USE — ACCESSORIES

- ⚠ Before handling accessories, confirm the appliance is off and the ironing panel has cooled.
- ⚠ Never reinstall a wet accessory. Dry completely to prevent short circuit. Always reinstall after cleaning to prevent dust from entering internal components.

1. Suction Panel

What it does: Holds and stretches fabric with vacuum suction while steaming — removes wrinkles more efficiently than steam alone.

To remove: Press either end of the panel to release. **To reinstall:** Align with the slots and press until the magnetic assembly clicks.

2. Dust Collection Case

What it does: Captures lint, dust, and pet hair from garment surfaces while steaming.

To remove: Open the suction panel, then pinch both sides of the case and lift out. Clean with the included brush or replace with a new filter.

HOW TO USE — GETTING STARTED

Caution

1. During use, never aim steam at people or touch the ironing panel with bare skin.
2. Do not point the appliance at anyone while paused — steam may discharge when resuming.
3. The ironing panel remains hot for up to 60 minutes after powering off. Do not touch.
4. After each session, unplug the power cord. Ensure the body has cooled completely. Do not wrap the cord around the body. Drain the tank completely.

Step 1 — Fill the Water Tank

1. Pinch the top of the tank and pull it forward and downward to remove.
2. Remove the seal cap on the back. Fill with room-temperature tap water or purified water. Keep the opening facing up to prevent spills.
3. Replace the seal cap firmly, then push the tank back into the body until it clicks. Gently tug to confirm it's locked.

Step 2 — Power On

1. Plug in firmly. The breathing light will flash once and turn off.
2. Press and hold the Main Power Button for 3 seconds. The breathing light pulses during warm-up (~10–15 seconds). When it turns solid, you're ready to go.

Step 3 — Steam & Suction Modes

1. Place the ironing panel against the garment.
2. Press the Steam Button to activate steam. Each press cycles through 3 levels: Soft → Normal → Turbo. The indicator lights show the current level.
3. Press the Suction Button to activate suction. Each press cycles through 3 levels: Soft → Normal → Turbo.

Step 4 — Pause & Resume

1. Button pause: Press the power button once to pause (indicators blink slowly). Press again to resume.
2. Smart sensing pause: Release the handle for 1 second — steam and suction pause automatically. Grip the handle to resume instantly.

Step 5 — Power Off

1. Press and hold the **Main Power Button** for 3 seconds. Confirm all lights are off, then unplug.
2. Remove the tank, open the cap, and drain all remaining water.

RECOMMENDED SETTINGS BY FABRIC

Select the best combination of steam and suction for each garment :

Fabric	Steam	Suction
Small Items (scarves, handkerchiefs)	•	•
T-shirts	• •	•
Dress shirts	• •	• •
Suit jackets / Blazers	• •	• •
Jeans / Denim	• • •	• • •
Wool / Cashmere coats	• • •	• • •
Cushions / Upholstery	• • •	• • •

• Soft - •• Normal - ••• Turbo

FABRIC COMPATIBILITY

Material	Compatible	Material	Compatible	Material	Compatible
Leather	×	Acrylic	○	Polyester	○
Wool	○	Cashmere *	○	Silk *	○
Linen **	○	Rayon	○	Cotton	○

○ Compatible - × Not compatible

* For delicate fabrics like silk and cashmere, always test on a hidden area first.

** Due to fiber characteristics, some wrinkles in linen may not be fully removable.

Before use, always:

1. Check the garment's care label.
2. Verify the fabric composition.
3. If unknown, contact the garment manufacturer.

Caution

1. If the care label shows "Low Temperature" or "Medium Temperature" iron, use the Soft steam setting.
2. For blended fabrics, check the content of all fibers.
3. For luxury or specially treated fabrics (velvet, nylon, cashmere), test on a hidden area first.
4. Never use on any type of leather.
5. Steam may cause discoloration or warping on garment decorations (e.g., plastic buttons, sequins). Contact the garment manufacturer if unsure.

CARE & MAINTENANCE

 Always unplug and allow the appliance to cool completely before cleaning.

 Do NOT:

1. Wash the appliance body directly with water.
2. Use steel wool, abrasive pads, toothpaste, thinners, or solvents.

Routine Cleaning

1. **After each use:** Wipe the steam outlets, ironing panel, and body with a soft, dry cloth.
2. **For stubborn stains:** Use a cloth dampened with water and a mild neutral detergent. Wipe dry immediately.
3. **As needed:** Open the suction panel, remove the dust collection case, and clean it with the included brush whenever lint or debris has accumulated or suction performance has decreased.

Clearing Clogged Steam Outlets

1. Use a needle or thin pin to gently clear debris from the outlets. Wipe with a damp cloth, then dry with a clean cloth. After cleaning, steam into the air for 1–2 minutes before using on garments.

PRODUCT SAFETY CHECK

If you have used this product for a long time, inspect it regularly.

Do you notice any of the following?

1. Unusual heat, deformation, discoloration, or odors from the appliance, plug, or power cord.
2. A damaged power cord (cracks, cuts, or exposed conductors).
3. Intermittent power when the cord is moved or bent (poor contact).
4. Unusual sounds when the appliance is on (other than normal pump/steam sounds described in this manual).

Stop Use

If any of the above applies, stop using the appliance immediately. Unplug the power cord to help prevent fire or electric shock. Contact airmorn customer support for inspection or service. Do not take the product apart or attempt to repair it yourself.

TROUBLESHOOTING

⚠ If the issue persists after trying these solutions, stop use and contact aironix customer support. Do not attempt to repair the appliance yourself.

Problem	Possible Cause	Solution
Won't turn on/off	Plug not fully inserted	Check that the plug is firmly in the outlet.
	Button not held long enough	Press and hold the power button for 3 seconds.
	Internal fault	Stop use immediately. Unplug. Contact support.
No steam	Not plugged in	Check connection.
	Still warming up	Wait for the breathing light to turn solid (~15 sec).
	Empty tank	Refill the water tank.
Weak steam	Low setting selected	Increase the steam level (Soft → Normal → Turbo).
	Clogged outlets	Clean per "Care & Maintenance" instructions.
	Low visibility	Steam visibility varies with room conditions — this is normal.
Water dripping	Residual water after idle	Allow a few seconds for normal steaming to resume.
	Clogged outlets	Clean per "Care & Maintenance" instructions.
Weak suction	Low setting selected	Increase the suction level.
	Clogged vents	Clean the dust collection case.

LIMITED ONE-YEAR WARRANTY

What does this warranty cover?

airmorn warrants this product against defects in materials and workmanship for a period of one (1) year from the date of original purchase, with proof of purchase.

What will airmorn do?

At our option, we will repair or replace the defective product free of charge. Replacement products may be new or refurbished.

How do you get service?

1. Save your original receipt as proof of purchase date.
2. Email support.us@airmorn.com with your model number, purchase date, and a description of the issue.
3. Do not return the product to the retailer. Follow the instructions provided by our support team.

What is NOT covered?

1. Damage from commercial or non-household use
2. Damage from misuse, abuse, neglect, or failure to follow the user manual
3. Products modified or repaired by unauthorized persons
4. Damage from use of non-recommended accessories
5. Damage from power surges, lightning, or incorrect voltage
6. Normal wear and tear, including accessories and consumable parts
7. Shipping and handling costs
8. Consequential or incidental damages

How does state law apply?

This warranty gives you specific legal rights. You may also have other rights that vary from state to state. Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

CUSTOMER SUPPORT

For questions, service, or warranty claims, email us at the address below.

Email	support.us@airmorn.com
-------	--

Please include the following in your message:

1. Product name: airmorn Garment Steamer
2. Model number: AM-ADS10P
3. Date of purchase
4. Description of the issue

SPECIFICATIONS

Product Name	airmorn Garment Steamer
Model	AM-ADS10P
Rated Voltage	AC 120V
Rated Frequency	60Hz
Power Consumption	1300W
Tank Capacity	Approx. 5 fl oz (145 mL)
Power Cord Length	Approx. 6.9 ft (2.1 m)
Steam Output	Soft: ~12 g/min · Normal: ~16 g/min · Turbo: ~20 g/min
Suction Power	Soft: ~3,000 Pa · Normal: ~4,000 Pa · Turbo: ~5,000 Pa
Dimensions	Approx. 10.4 × 7.1 × 4.3 in (26.5 × 18 × 11 cm)
Weight	Approx. 2.34 lbs (1,060 g)
Safety Features	Thermostat, Overheat Protection, Auto Shut-Off (5 min)

1. Product design and specifications may change without notice.
2. Actual product color may differ slightly from printed images.
3. Illustrations are simplified representations.

REGULATORY

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and the receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ETL Listed

This product is ETL Listed and has been independently tested and certified by Intertek to applicable product safety standards. The ETL Listed Mark, control number, and applicable standards are shown on the product rating label.

Recycling & Disposal

Please dispose of this product in accordance with local regulations. Do not dispose of in household waste if local recycling facilities are available.

Thank you for choosing airmorn.

A smoother morning starts here.



Official Website : airmorn.com
airmorn Customer Support : support.us@airmorn.com
Made in China
© 2026 airmorn